





# BOLT

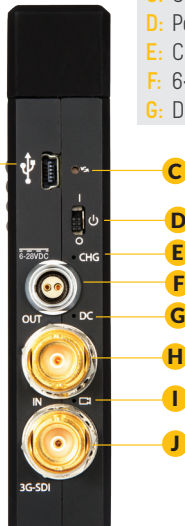

Bolt Transmitter

- A: Battery Level
- B: USB Port
- C: Configuration Button
- D: Power Switch
- E: Charge LED
- F: 6-28VDC Input
- G: DC LED
- H: SD/HD/3G-SDI Output
- I: Video LED
- J: SD/HD/3G-SDI Input

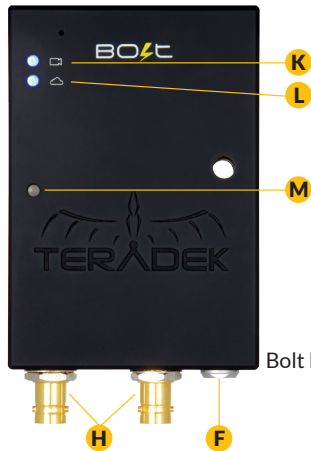

Bolt Receiver



# DEVICE OPERATION



- 1 Connect the Bolt Transmitter to your camera's SDI output. Connect the Bolt Receiver to your monitor's SDI input.



Cincocoil SDI

- 2 Connect power to your Bolt Transmitter using the P-Tap to Lemo cable and Bolt Receiver using the included AC adapter. The transmitter contains an internal battery that lasts for up to 60 minutes.



P-Tap to Lemo



AC adapter

- 3 Move the Bolt Transmitter power switch (D) to the **ON** position. Video appears within a few seconds.

## Notes:

- 1 Keep the transmitter mounted vertically to ensure optimal signal transmission.
- 2 Do not bundle Bolt receivers or transmitters together. For optimal performance, place multiple transmitters or receivers a few feet away from one another.

**ALWAYS MOUNT BOLT TRANSMITTER VERTICALLY**

## NEED MORE HELP?

1. Support forum: <http://support.teradek.com> → Contains tips, information and all the latest firmware & software updates.
2. Training videos: <http://www.teradek.com/training>  
TERADEK SUPPORT STAFF: [support@teradek.com](mailto:support@teradek.com) or call 888-941-2111 ext2 (Mon-Fri 9am to 6pm PST)